



EPE-EX2

LED Exit Sign



RoHS



INTRODUCTION


EPE-EX2 LED Exit Sign is compact and decorative design with high luminance performance. It is suitable for various mounting way such as ceiling, wall, and side mounting. LED self-contained luminaire with manual test and auto test optional. Replaceable pictogram design, including arrow right, left, down, up. Pictogram inserts all in one package.

FEATURES

- Compact and decorative design.
- Aluminum housing with high grade acrylic panel.
- LED Exit Sign with high luminance performance.
- LiFePO4 battery, long-life time.



Dimensions unit:mm

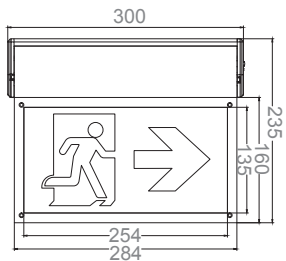

Mounting Options



Side Mounting

Wall Mounting

Ceiling Mounting

Model List

Model	EPE-EX2-MT-3H	EPE-EX2-AT-3H
Input Voltage	220-240V	220-240V
Output Power	1W Max	1W Max
Charge Duration	24H	24H
Discharge Duration	3H	3H
Battery	LiFePO4 6.4V600mAh	LiFePO4 6.4V600mAh
Test Mode	Manual Test	Auto Test

Driver Datasheet

Model	EPE-EX2
Power Consumption	3W Max
Frequency	50/60Hz
Input Voltage	220-240V
Discharge Efficiency	≥60%
Output Power	1W Max
Power Factor	≥0.3
Rated Input Current	120mA±10%
Full load output voltage	DC12V
Output current range	100mA±10%
Short circuit protection	PASS
Over voltage protection	PASS
Surge	0.5KV
Withstand voltage	AC3750V

Technical Data Sheet

Model	EPE-EX2
LED	SMD 2835
CCT(K)±10%	5000K
CRI	>70
LED Driver	Built-out
Protection Class	Class I
IP Rating	IP20
Finishing color	Silver Aluminum
Material	PMMA 0℃ ~45℃
Operating Temp (°C)	0℃ ~60℃
Storage Temp (°C)	

Instructions for automatic test option

1.Once the unit is powered up it will automatically initiate a self test and diagnostics as follows:

- Every 4seconds: Checks for battery disconnection,charger board fault,lamp fault and transfer fault.
- Every month: Performs a 3minutes duration test.
- Every year:Performs a 1 hour or 3 hours duration test.

All test functions are factory preset and do not need field adjustment.

2.Dual Colour Indicator LED Status Mesnings

- Green Solid On Ready/Normal Operation
- Red Requires Service

•	One flashes, 4 seconds pause	Battery not connected
••	Two flashes, 4 seconds pause	Low battery voltage
•••	Three flashes, 4 seconds pause	Charger board fault
••••	Four flashes, 4 seconds pause	AC/DC transfer fault
•••••	Five flashes, 4 seconds pause	LED lamp fault

NOTE:After repairing a service fault,press and hole the test button for 2 seconds to reset the flashing indicator light to green.

3.Manual Testing

Press test button once	30 seconds duration test
Press test button twice within 2 seconds	3 minutes duration test
Press test button 3 times within 2 seconds	30 minutes duration test
Press test button 4 times within 2 seconds	1 hour or 3 hours duration test



▼ www.epowerem.com info@epowertech.cn TEL: +86-755 85272094 ▼

Add: 302, 6th Building, Hesheng Industrial park, FuHai Sub-district, Bao'an, Shenzhen, PRC